

## Why when printing do I just get a blank or black page?

Author:  
**www.My-Help.co.uk**

Created On: 25 Mar 2007 11:52 AM

---

Please lower the DPI quality on the Print ribbon.

We also recommend disabling any Advanced/Photo Enhancement options in your printer settings and downloading the latest printer drivers from the printer manufacturers website. If the problems persist, please submit a support ticket at [www.My-Help.co.uk](http://www.My-Help.co.uk)